

## Quick Reference

This quick reference shows how to access the main functions shown by the color TFT screen of the DRO. Once these functions are accessed, the DRO will guide the operator through its operations easily and intuitively with interactive assistance messages.


For further detail on all the features, refer to the CD that comes with the DRO and contains the full installation and operation manuals which are also available on our corporate website: [www.fagorautomation.com](http://www.fagorautomation.com).

## Turning the DRO on and off



The DRO turns on automatically when applying voltage or after pressing the on/off key.


## Front plate

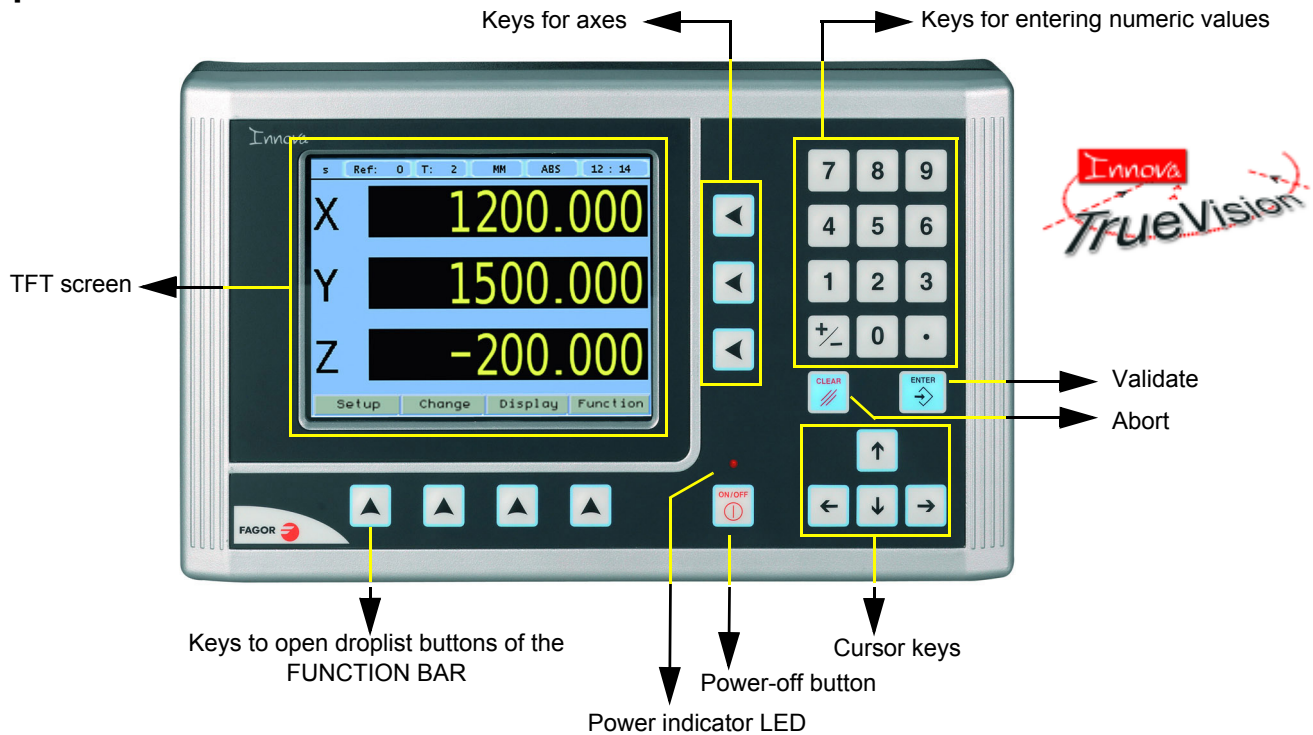

## Axis zero and preset



 Pressing Set/Clear toggles between axis zeroing (Clear) and presetting (Set). The status bar shows the current status of this function at the top left with the letters C or S.



## Degrees < - > Degrees Minutes Seconds




## Searching the center of a part




## Main screen:

Here are the functions the machine operator can access from a main menu or main screen.


Once the functions are accessed, the DRO guides the operator through screen messages and a direct access to help texts for each operation using the function key ?.

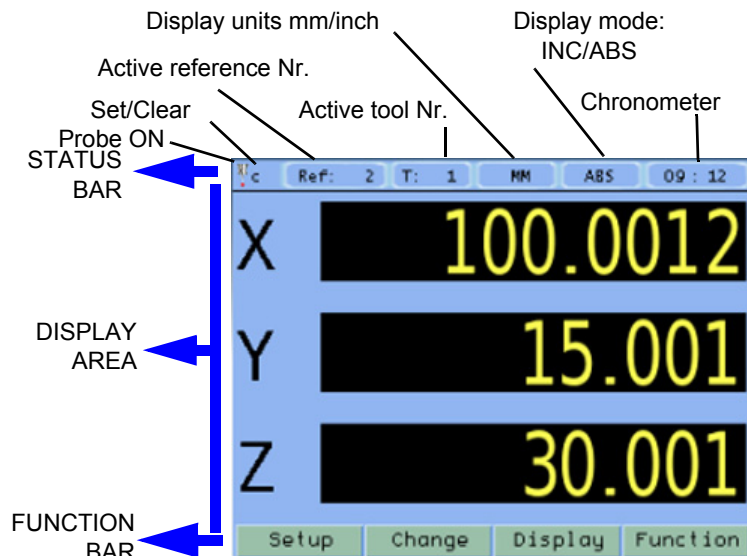


## Accessing functions in MILL mode:

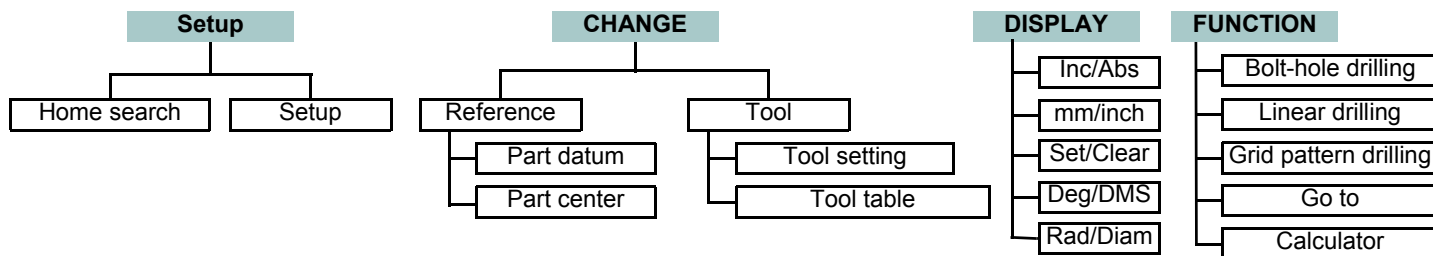

## Accessing functions in LATHE mode:

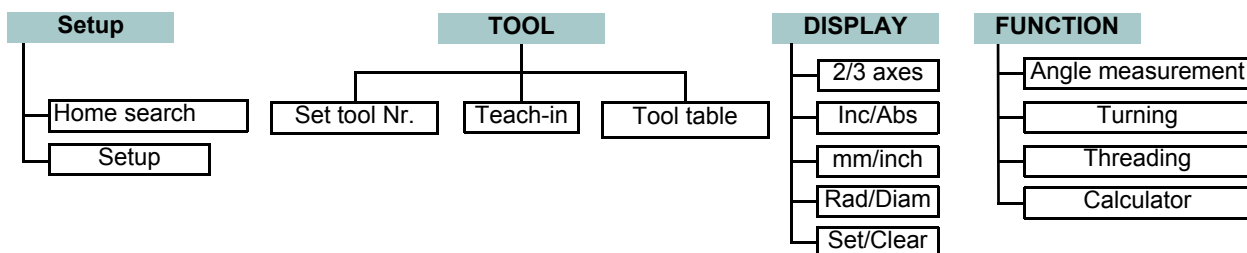

## Accessing installation parameters:

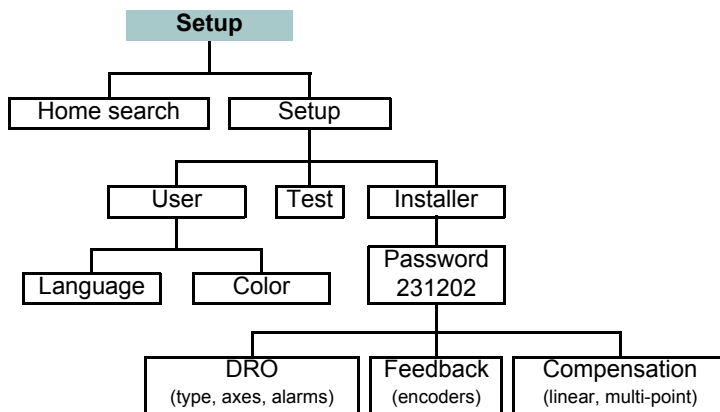

### FAGOR AUTOMATION S. COOP.

B° San Andrés N° 19  
 Apdo de correos 144  
 20500 Mondragón - España  
 Web: [www.fagorautomation.com](http://www.fagorautomation.com)  
 Email: [info@fagorautomation.es](mailto:info@fagorautomation.es)  
 Tel: +34 943 719200  
 Fax: +34 943 791712

