NEWALL DP500 Quick Start Guide

For the complete manual please download from: http://newall.com , Click Technical Support to access the download page.

Marnings

The mains supply is connected into a switch mode power supply (separate from your DP500) via a detachable supply cord supplied. If another supply cord is used, it must have fitted a C5, 10A, EARTHED mains connector with a cord rated for at least 10A.

If a mains plug is not already fitted to the supply cord or is of the wrong type, then a suitable EARTHED plug should be used which complies with the relevant specifications for plugs and socket-outlets.

You can only use the DP500 with Newall Spherosyn LT and Microsyn LT analogue encoders.

Unit only to be serviced by Newall qualified personnel or authorised alternatives.

If a Spherosyn LT encoder travels over 2.2m an error message will be displayed, see full manual for details.


Turn off the power by disconnecting the power supply connector before you connect the encoder(s)

Technical Specification

3/EEC (Low Voltage	
8 Class B	
BS EN 55024:1998	
upply Unit (Supplied) lz)	
node VDC	
DP500	
Voltage Directive	

Note: Newall Measurements Systems reserves the right to change specifications without notice.

Connections

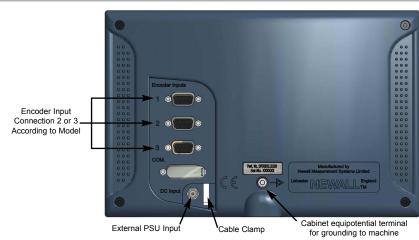

HEAD OFFICE Newall Measurement Systems Ltd.

Technology Gateway, Cornwall Road South Wigston Leicester LE18 4XH United Kingdom Telephone: +44 (0)116 264 2730 Facsimile: +44 (0)116 264 2731 Email: sales@newall.co.uk Web: www.newall.co.uk

Newall Electronics, Inc.

1803 O'Brien Road Columbus, OH 43228 Telephone: +1 614 771 0213 Toll Free: 800.229.4376 Facsimile: +1 614 771 0219 Email: sales@newall.com Web: www.newall.com

Custom Sensors & Technologies

11F Chang Feng International Tower 89 East Yunling Road Shanghai, 200062 China Tel: +86 21 8025 7166 Fax: +86 21 6107 1771 E-mail: sales@newall.cn Web: www.newall.cn



A full hard copy of the manual is available free of charge on request

