

**HEAD OFFICE**  
**Newall Measurement Systems Ltd.**  
 Technology Gateway, Cornwall Road  
 South Wigston  
 Leicester LE18 4XH  
 United Kingdom  
 Telephone: +44 (0)116 264 2730  
 Facsimile: +44 (0)116 264 2731  
 Email: sales@newall.co.uk  
 Web: www.newall.co.uk

**Newall Electronics, Inc.**  
 1803 O'Brien Road  
 Columbus, OH 43228  
 Telephone: +1 614 771 0213  
 Toll Free: 800.229.4376  
 Facsimile: +1 614 771 0219  
 Email: sales@newall.com  
 Web: www.newall.com



023-81365-UK/0

A full hard copy of the manual is available free of charge on request

# NEWALL DP700 MK2 Quick Start Guide

For the complete manual please download from:

<http://newall.com> , Click Technical Support to access the download page.

## Warnings

The mains supply is connected into a switch mode power supply (separate from your DP700) via a detachable supply cord supplied. If another supply cord is used, it must have fitted a C5, 10A, EARTHED mains connector with a cord rated for at least 10A.

If a mains plug is not already fitted to the supply cord or is of the wrong type, then a suitable EARTHED plug should be used which complies with the relevant specifications for plugs and socket-outlets.

You can only use the DP700 with Newall Spherosyn and Microsyn analogue encoders.

Unit only to be serviced by Newall qualified personnel or authorised alternatives.

Turn off the power by disconnecting the power supply connector before you connect the encoder(s)

## Technical Specification

### Environmental

**Operating Temperature**  
 -10°C to 50°C

**Storage Temperature**  
 -20 to 70°C

**Environmental Conditions** - IP40 (Stand Alone)  
 IP54 (Panel Mount)

**Relative Humidity** - maximum 95% for temperature up to 31°C

### Disposal

At the end of its life, you should dispose of the DP700 in a safe manner applicable to electronic goods.

The case work is suitable for recycling. Please consult local regulations on disposal.

### Electrical

EU Directive 73/23/EEC (Low Voltage Directive)

BS EN 55022:1998 Class B  
 BS EN 55024:1998

### Input to Power Supply Unit (Supplied)

100-240V (47-63Hz)

### External switch-mode

Output voltage 15VDC


### Input Voltage to DP700

15-24VDC ±10%

Conforms to Low Voltage Directive

Note: Newall Measurements Systems reserves the right to change specifications without notice.

## Connections

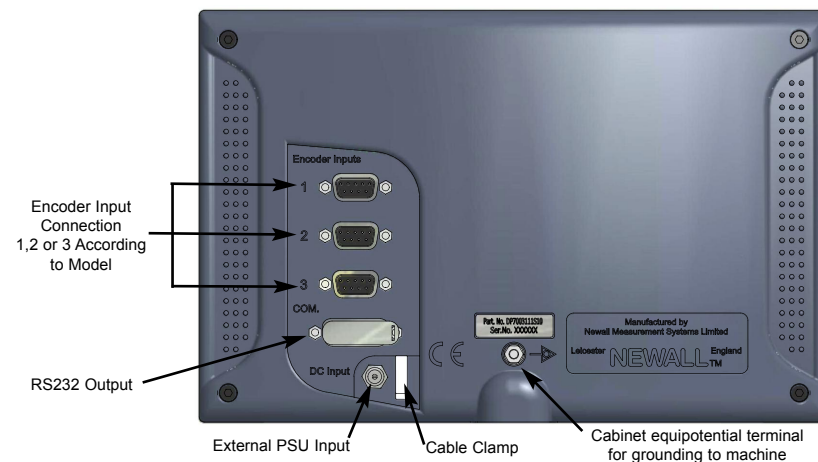

# Understanding the Keypad



- Axis Selection Key
- Numeric Keys
- Enter Key
- Clear Numeric Entry
- Center Find
- Undo Key
- Digifind / Reference
- Switches between Zero and Axis Preset modes
- Switches between Absolute and Incremental modes
- Switches between Inch and mm display
- Information selection (scrolls through options on Message display)
- Function Menu Key
- Function Navigation Keys
- Sleep key

## Zero an Axis in Zero Mode

Ensure DP700 is in Zero Mode of Axis 1, 2 or 3

## Zero an Axis in Set Mode

Ensure DP700 is in Set Mode of Axis 1, 2 or 3

## Preset an Axis

Ensure DP700 is in Set Mode =

## ENTERING SETUP

Until display shows display shows

# SETTING UP THE UNIT

